


# Aero Brake & Spares

Revised Component Maintenance Manual  
 737-100/200 Main Brake Assembly, P/N 2601042  
Illustrated Parts List

Fig. Item	Part Number	Airline Part No.	Nomenclature	Eff. Code	Units Per Assy.
1-37	2607528-3		. TUBE, Adjuster .....	B	6
37A	2603835-12		. TUBE, Adjuster .....	A	6
38	2604849		. BALL, Adjuster .....	A, B	6
39	MS24042-4		. NUT, Self-locking .....	A, B	6
40	2602917		DELETED		
45	154928		. BUSHING, Friction .....	A	6
50	2602918		. PIN, Friction .....	A	6
51	2607180-1		. PIN, Adjuster .....	A, B	6
55	2602915		. WASHER, Keyed .....		6
55ALT	8512915		. WASHER, Keyed . (0GDP5) ..... FAA-PMA Project # PM8074SC-T)		6
60	MS16625-1137		. RING, Retainer .....		6
			(First Oversize) (For service repair)		
60B	MS16627-1143		. RING, Retainer .....		AR
			(Second Oversize) (For service repair)		
65	2603109		DELETED		
66	2608586		DELETED	B	6
-66A	2603109		. WASHER, Recessed .....	A	6
70	2601092		. WASHER, Recessed .....		6
-75	2602679		. SPRING, Helical compression .....		
75A	2605353		DELETED	A	2
			. SPRING, Helical compression .....		
			(Not required if items 76. 271 and 272 are used)		
76	2603041				2
80	2602839		. PIN, Retainer .....		
-85	2603585		. PIN, Lining Wear Indicator .....	A	2
86	2605008		. RING, Retainer .....		2
90	2602916		. CLIP, Retaining .....		2
			. BUSHING .....		

Those items printed in BLUE are Distributor or PMA stock items with Aero Brake & Spares, Inc.

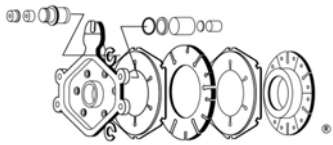

# Aero Brake & Spares

Revised Component Maintenance Manual  
 737-100/200 Main Brake Assembly, P/N 2601042  
 Illustrated Parts List

Fig. Item	Part Number	Airline Part No.	Nomenclature	Eff. Code	Units Per Assy.
1-168	AS3510-02XXC		. CABLE, Safety (Available in lengths from 3.00 – 24.00 inches (76.2 – 609.6mm) in 3.00 inch (6.2mm) increments		AR
-169	AS3510-02F		. FERRULE, Safety cable, short		AR
-169A	F10-04		. FERRULE, Safety cable, long		AR
170	2605083		. PACKING, Preformed		6
170-ALT	8515083		. PACKING, Preformed (V0GDP5)		6
175	MS28774-128		. RING, Packing backup, slotted (Superseded by 26033620 (Use until exhausted)		12
-175A	2603362		. RING, Packing backup, solid (Superseded by 2606799-128A)		12
-175B	2606799-128A		. RING, Packing backup, solid (Supersedes P/N 2603362)		12
180	2603103		. PIN, Insulator hold down (Superseded by 2609723-1, -2) (Sue until exhausted)		6
185	154929		. PROTECTOR, Insulator (Superseded by 2609723-1, -2) (Use until exhausted)		6
190	2600814		. HEAT SHIELD, Piston (Superseded by 2609723-1) (Use until exhausted)	A	6
-195	153809		DELETED		
-195A	2604258		DELETED		
195B	2608845		. INSULATOR, Piston (Superseded by 2609723-1, -2) (Use until exhausted)		6
200	2604249		. GUIDE, Insulator (Superseded by 2609723-1, -2) (Use until exhausted)		6
205	149629		. CLIP, Split tubular (Superseded by 2609723-1, -2) (Use until exhausted)		6
210	2605082		. PACKING, Preformed		6
210-ALT	8515082		. PACKING, Preformed (V0GDP5)		6
215	MS28774-216		. RING, Packing backup, split (Superseded by 2603361) (Use until exhausted)		12

Those items printed in BLUE are FAA-PMA parts by Aero Brake & Spares, Inc.

Honeywell® Component Maintenance Manual

32-40-03

Page 1008

Form 12-501L Rev 20 Aug 27/04

Oct. 16/06