


# Aero Brake & Spares

Revised Component Maintenance Manual  
 737-100/200 Main Brake Assembly, P/N 2604042  
 Illustrated Parts List

Fig. Item	Part Number	Airline Part No.	Nomenclature	Eff. Code	Units Per Assy.
1-95	2603096		. SHEET, Anti-abrasion . . . . .		6
100	2601743		. PLUG, Shipping . . . . .		1
105	2602554		. PLATE, Cover. . . . .		1
<b>ATTACHED PARTS</b>					
110	MS35266-79		. SCREW, Machine . . . . .		2
* — —					
115	2602555		. PLUG, Inlet . . . . .		1
120	2600428		. PACKING, Preformed . . . . .		1
125	MS28774-211		. RING, Racking backup . . . . .		2
-126	MS20995NC32		. WIRE, Nickel-copper . . . . .		AR
-127	AS3510-02XXC		. CABLE, Safety . . . . . (Available in lengths from 3.00 – 24.00 inches (76.2 – 609.6mm) In 3.00 inch (76.2mm) increments)		AR
-128	AS3510-02F		. FERRULE, Safety cable , short . . . . .		AR
-128A	F10-04		. FERRULE, Safety cable, long . . . . .		AR
130	150635		. VALVE ASSEMBLY, Bleeder . . . . .		1
135	AN502-10-6		. . SCREW, Machine . . . . .		1
140	MS35338-43		. . WASHER, Lock . . . . .		1
145	145938		. . SCREW, Bleeder . . . . .		1
150	2601079		. ADAPTER, Bleeder screw . . . . .		1
-151	2604446		. BUSHING, Bleeder screw . . . . . (For service repair – Used with P/N 2604447)		AR
155	151890		. PACKING, Preformed . . . . .		1
-155A	2604447		. PACKING, Preformed . . . . . (For service repair–replaces 2601079 Used with 2604446)		AR
-160	151383		. BUSHING, Bleeder port . . . . . (For service repair–Used on 151387)		AR
-165	151387		. PACKING, Preformed . . . . . (For service repair- Used on 151383)		AR
-165A	8511387		. <b>PACKING, Preformed (VOGDP5) . . . . .</b> <b>FAA-PMA Sup # 18</b>		<b>AR</b>
-167	MS20995NC32		. WIRE, Nickel-copper . . . . .		AR

Those items printed in BLUE are stock items with Aero Brake & Spares, Inc.

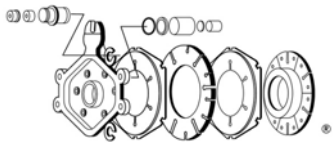

# Aero Brake & Spares

Revised Component Maintenance Manual  
 737-100/200 Main Brake Assembly, P/N 2604042  
Illustrated Parts List

Fig. Item	Part Number	Airline Part No.	Nomenclature	Eff. Code	Units Per Assy.
1-168	AS3510-02XXC		. CABLE, Safety. . . . . (Available in lengths from 3.00 – 24.00 inches (76.2 – 609.6mm) In 3.00 (76.2mm) increments)		AR
-169	AS3510-02F		. FERRULE, Safety cable, short. . . . .		AR
-169A	F10-04		. FERRULE, Safety cable, long. . . . .		AR
170	2605083		. PACKING, Preformed . . . . .		6
170A	8515083		. <b>PACKING, Preformed (0GDP5) FAA-PMA Sup (PM8347-T)</b>		<b>6</b>
175	MS28774-128		. RING, Packing backup, slotted . . . . . (Superseded by P/N 2603362, use Until exhausted)		12
-175A	2603362		. RING, Packing backup, solid . . . . . (Superseded by 2606799-128A, use Until exhausted)		12
-175B	2606799-128A		. RING, Packing backup, solid . . . . . (Supersedes P/N 2603362)		12
180	2603103		. PIN, Insulator holddown . . . . . (Superseded by P/N 2609723-1 or 2609723-2, use until exhausted)		6
185	154929		. PROTECTOR, Insulator . . . . . (Superseded by P/N 2609723-1 or 2609723-2, use until exhausted)		6
190	2600814		. HEAT SHIELD, Piston . . . . . (Superseded by P/N 2609723-1 use Until exhausted)	A	6
-195	153809		DELETED		
-195A	2604258		DELETED		
195B	2608845		. INSULATOR, Piston . . . . . (Superseded by P/N 2609723-1 or P/N 2609723-2, use until exhausted)		6
200	2604249		. GUIDE, Insulator . . . . . (Superseded by P/N 2609723-1, -2, Use until exhausted)		6
205	149629		. CLIP, Split tubular . . . . . (Superseded by P/N 2609723-1, -2, Use until exhausted)		6
210	2605082		. PACKING. Preformed . . . . .		6
210A	8515082		. <b>PACKING, Preformed . (0GDP5) FAA-PMA Sup (PM8358SC-T)</b>		<b>6</b>
215	MS28774-216		. RING, Packing backup, split . . . . . (Superseded by P/N 2603361, use until exhausted)	A	12

Those items printed in BLUE are stock items with Aero Brake & Spares, Inc.


## Honeywell® Component Maintenance Manual

32-40-03

Publication 12-501L, Rev 20

Page 1008

Sep 29/06

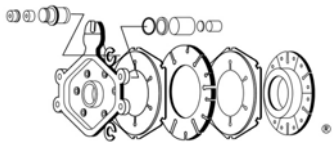

# Aero Brake & Spares

Revised Component Maintenance Manual  
 737-100/200 Main Brake Assembly, P/N 2604042  
 Illustrated Parts List

Fig. Item	Part Number	Airline Part No.	Nomenclature	Eff. Code	Units Per Assy.
1-215A	2603361		. RING, Packing backup, solid . . . . . (Superseded by P/N MS28774-216) (Superseded by P/N 2606799-216, Use until exhausted)	A	12
215B	2606799-216		. RING, Packing, solid . . . . . (Supersedes P/N 2603361)	A	12
215C	2606799-216		. RING, Packing backup, solid . . . . . (Use on one-piece piston item 221A)		6
220	2601076		. PISTON . . . . . (Superseded by P/N 2609723-1, use use until exhausted)	A	6
220A	2609723-1		. PISTON . . . . . (Supersedes P/Ns 2601076, 2603103, 154929, 260814, 2608845, 2604249, 149629)	A	6
221	2607394		. PISTON . . . . . (Superseded by P/N 2609723-2, use until exhausted)	B	6
221A	2609723-2		. PISTON . . . . . (Supersedes P/Ns 2607394, 2603103, 154929, 2608845, 2604249 and 149629)	B	6
225	154917		. RING, Wiper . . . . .		6
230	2601077		. BUSHING, Piston . . . . .	A	6
231	2607864		. BUSHING, Piston . . . . .	B	6
-232	MS20995NC32		. WIRE, Nickel-copper . . . . .		AR
-233	AS3510-02XXC		. CABLE, Safety . . . . . (Available in lengths from 3.00 – 24.00 inches (76.2 – 609.63mm) in 3.00 inch (76.2mm) increments)		AR
-234	AS3510-02F		. FERRULE, Safety cable, short . . . . .		AR
-234A	F10-04		. FERRULE, Safety cable, long . . . . .		AR
235	2601082		. PACKING-Preformed . . . . .		1
240	AN814-4L		. PLUG, Pressure . . . . . (Superseded by P/N ASA5169-04L, use until exhausted)		1
-240A	AS5169-04L		. PLUG, Pressure . . . . . (Supersedes P/N AN814-4L)		1

Those items printed in BLUE are stock items with Aero Brake & Spares, Inc.